

 <p>AUTO CARE USA AUTOMOTIVE EQUIPMENT</p>	<p style="text-align: center;">Auto Care USA a division of Northwest Equipment Manufacturing, Inc. 122 East Reserve Dr. • Kalispell, MT 59901 USA • Office: 406-755-0805 • Fax: 406-755-0813 nwEquipmentSales.com</p>	 <p style="text-align: center;">Northwest Equipment Mfg. Inc.</p>
<p>Reach us at: 877-349-2327 or 406-755-0805</p>		

Instructions for assembly of stands


WARNING—IMPORTANT—READ AND UNDERSTAND

1. On front wheel stands, place top upside down on a surface that raises top at least 2” and leaves 2” exposed on each side of top.
2. Place legs outside top and insert hex bolts through holes with notch on legs resting on top. Hand tighten nuts. Repeat on all legs. If Technician’s platform is to be installed, attach bracket before inserting bolts on long side of stand. Place bracket on outside of legs—bow out. Fasten to legs and top on long side of stand.
3. Place straps inside legs on holes, insert hex bolts, attach nuts and hand tighten.
4. Tighten all nuts and bolts to 20 ft. pounds torque making sure **top** is resting on notches on **legs**.
5. On the rear wheel stand, assemble as above except: add the wheel stops to front and rear of stands putting bolts through wheel stops, legs, and top. If stand has slip plate, remove red plastic shipping pins. Then place slip plate, unpainted side up, on a surface as above. (Note: Slip plate must be cleaned and relubricated periodically. A tube of lubricant, a marine Teflon®, resistant to gasoline, water, salt and solvents, is enclosed with each set.) Place stand top, unpainted side down, on slip plate, making sure locking pin holes are on the same side. Then add wheel stops as above. Hand tighten when stand is assembled, then tighten nuts and bolts to 10 ft pounds torque.
6. Check periodically for 20 ft. pounds torque.
7. Return to Northwest Equipment Mfg. if any corrections are necessary.
8. If stand has adjustable legs, attach at this point, threading bolt through nut and washer into bottom of leg.
9. Only Grade 8 bolts and Flexloc® nuts are to be used except on leg adjusters.
10. Place turntables on front stands with the handle and dial on the outside, away from the vehicle. Be sure turntable is flat on top and inside legs.
- 11. Failure to heed these warnings may result in loss of load, damage to the stand, and/or failure resulting in personal injury or property damage.**

To be used with the NWES turntable set only.

(See Parts List and finished Stands on 2nd page.)

Parts List

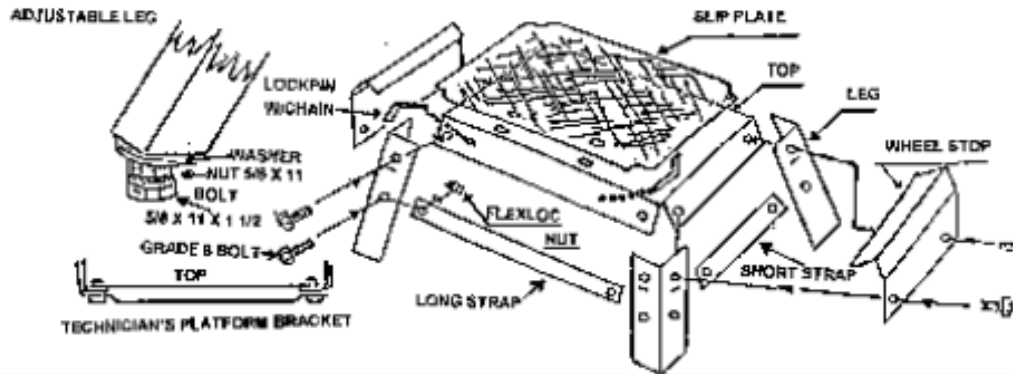

PARTS LIST

FRONT STAND

- 1 EA. TOP
- 4 EA. LEGS
- 2 EA. LONG STRAPS
- 2 EA. SHORT STRAPS
- 16 EA. BOLTS 5/16" X 18" X 3/4" GR.8
- 16 EA. NUTS - FLEXLOC @ 5/16" X 18
- 4 EA. LEG ADJUSTERS (880 SERIES ONLY)
- 4 BOLTS 5/8" X 11 X 1 1/2"
- 4 NUTS 5/8" X 11
- 4 WASHERS

REAR STAND

- 1 EA. TOP
- 4 EA. LEGS
- 2 EA. LONG STRAPS
- 2 EA. SHORT STRAPS
- 16 EA. BOLTS 5/16" X 18 X 3/4" GR. 8
- 16 EA. NUTS - FLEXLOC @ 5/16" X 18
- 2 EA. WHEEL STOPS
- 1 EA. SLIP PLATE (WA0806 & WA0886 ONLY)
- 2 EA. LOCKING PINS W/ CHAINS (WA0806 & WA0886 ONLY)
- 4 EA. LEG ADJUSTERS (880 SERIES ONLY)
- 4 BOLTS 5/8" X 11 X 1 1/2"
- 4 NUTS 5/8" X 11
- 4 WASHERS

Finished Stands

